Zenith

# LIFE User Manual







#### Seat Height Adjustment

To raise or lower the height, lift the lever on the right side of the chair and adjust to the proper height.

### Sliding Seat Depth Adjustment

Using the same lever as the seat height, push down to slide the seat within the 4inch seat depth range. Release the lever to lock the seat into position.

#### Height Adjustable Arms

Lift the lever on the outside of the arm pad to adjust the arm height.

#### **Forward Seat Flex**

No knobs or levers needed. Lean forward or perch towards the edge of the seat and Life's seat pan automatically adjusts to support your position.

# Upright Tilt Lock

To lock the seat in an upright position, push down the lever located on the left side of the seat. Lift lever to unlock.

## Flex Back

No need to adjust tension. Automatic recline tension counter-balances your body weight, resulting in perfect balance as you recline.

#### **Tension Selector**

To perfect the tension adjust the preference lever located at the back on the chair while in the upright position.

#### Height Adjustable Lumbar

Slide lumbar support up and down using the tabs.