 
 


VOX User Manual

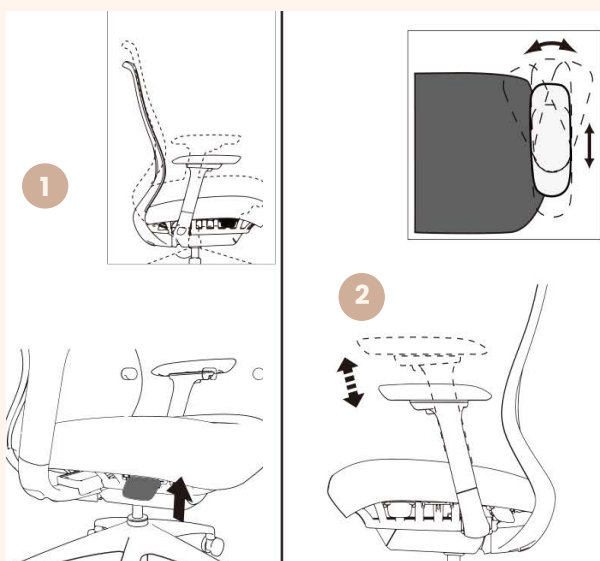

 
- 1 Seat Height Adjustment**
While seated, pull the seat height adjustment lever up and hold it while raising or lowering the seat to change the seat height. (Please note, the seat height adjustment lever is on the right side of the seat).

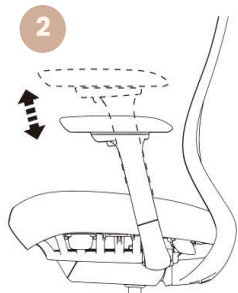

- 2 Arm Height Adjustment**
While seated, locate the button, under the front of the arm pad. Press the button to raise or lower the height of the arms to your desired height. The arm height adjustment range is 3.3" (83.82mm).

 
Independent Back Tilt

- 3** While seated, pull the single rod control lever completely backward and lean against the back. When your desired angle is achieved, return the lever to the original position to lock your tilt angle into place. There are 4 positions that provide 112°–128° of range.

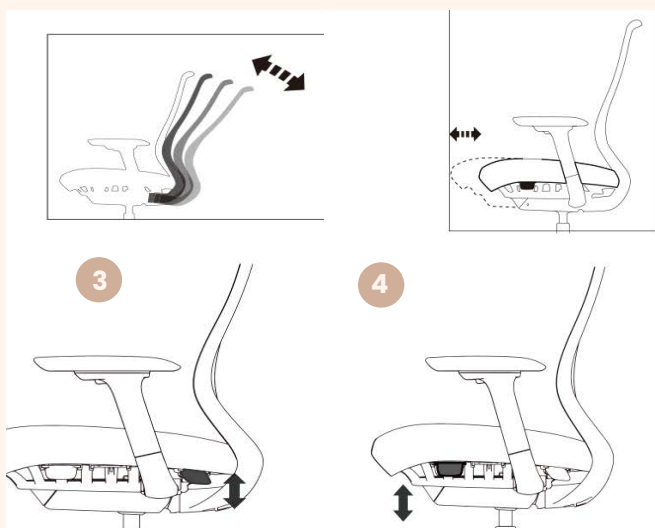

Seat Depth Adjustment

- 4** While seated, pull the single rod control lever upward to adjust the seat depth. The range of movement for the seat is approximately 2.4" (60.96mm). When your desired seat position is achieved, release the lever to lock your seat position into place.

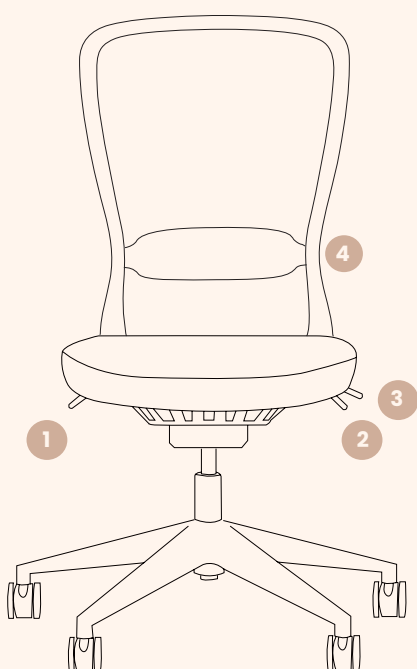VOX
User Manual**1 Seat Height Adjustment**

While seated, pull the seat height adjustment lever up and hold it while raising or lowering the seat to change the seat height. (Please note, the seat height adjustment lever is on the right side of the seat).

2 Independent Back Tilt

While seated, pull the single rod control lever completely backward and lean against the back. When your desired angle is achieved, return the lever to the original position to lock your tilt angle into place. There are 4 positions that provide 112°–128° of range.

3 Seat Depth Adjustment

While seated, pull the single rod control lever upward to adjust the seat depth. The range of movement for the seat is approximately 2.4" (60.96mm). When your desired seat position is achieved, release the lever to lock your seat position into place.

4 Additional Lumbar support Adjustment (optional)

While seated, using both hands, adjust the height of the Lumbar support to the required position.